J-Link/Flasher本体をパソコンにUSB経由で接続する前に、SEGGER社のWEBページ(以下のURL)から最新版のJ-Linkソフトウエアを ダウンロードしてパソコンにインストールしてください。

https://www.segger.com/downloads/jlink

| 🗐 J-Link Software and Documentation Pack | | | |
|--|---|---------------------------------|----------------------|
| All-in-one debugging solution Can be downloaded and used free of charge by Updated frequently <u>Release Notes</u> <u>More information</u> | any owner of a SEGGER <u>J-Link</u> , J -Trace , Fla | <u>isher ARM</u> or <u>Flas</u> | <u>her RX</u> model. |
| | | | |
| J-Link Software and Documentatio | n pack for Windows | V6.10b | 22,837 KB 👰 |
| Installing the software will automa offers to update applications which the J-Link software can be installer will co-exist in different directories | tically install the J-Link USB drivers and n use the J-Link DLL. Multiple versions of d on the same PC without problems; they s. More | <u>Older versions</u> | [2016-09-26] |
| SEGGER - J-Link V6.00g Setup | 🔜 SEGGER – J-Link V6.00g Setup | | |
| Choose Install Location | Installing | | |
| Choose the folder in which to install SEGGER - J-Link V6.00g. | Please wait while SEGGER - J-Link V6.00g is being installed. | | Link |
| Setup will install SEGGER - J-Link V6.00g in the following folder. To install in a different folder, click Browse and select another folder. Click Install to start the installation. Destination Folder Space required: 63.6MB Space available: 592.1GB | Extract: NANO 1305B0BN.;ffash Extract: NANO 130LD3BN.;ffash Extract: NANO 130LE0BN.;ffash Extract: NANO 130LE1BN.;ffash Extract: NANO 130LE2BN.;ffash Extract: NANO 130LE3BN.;ffash Extract: NANO 130SABN.;ffash Extract: NANO 130SABN.;ffash Extract: NANO 130SABN.;ffash Extract: NANO 130SABN.;ffash Extract: NANO 130SB0BN.;ffash | | |
| < gack Install Cancel | < Back | Next > C | ancel |

J-Link/Flasher本体をパソコンに接続して「J-Link Commander」を起動



J-LinkCommanderログ設定方法

| J-Link V6.10a Process: JLink.exe 区 A 般 答 题 答 @ Caps # - III 感 @ 下 管 .iII 心 2 | | | |
|--|--|--|--|
| "Setting"タブを選択 パソコン画面の右下のJ-Link iconをクリックして"J-Link Control Panel"を開く | | | |
| SEGGER J-Link anel General Settings Breakpoints HT Log CPU Regs Target Power SWV RAWTrace Image: Start minimized Start minimized Image: Start minimized Process C:\Program Files (x86)\SEGGER\JLink_V610a\JLink.exe DLL C:\Program Files (x86)\SEGGER\JLink_V610a\JLink.exe DLL C:\Program Files (x86)\SEGGER\JLink_V610a\JLink.exe Device Not selected Little endian 3.32 V Target interface JTAG Host interface USB (Port 0) | | | |
| Ready JLINK_GetHWStatus (Done) 0.033 sec. in 12 calls "Override"オプションにTickを入力 | | | |
| A Second Julia - Control panel General Settings Breakpoints RIT Log CPU Regs Target Power SWV Power Log file Not specified Settings file Not specified Script file Not specified Flash download ● Flash download ● On Compare Using fastest method ● Of Verify Programmed sectors, fastest method ● Show info window during Pisabled ● Override device selection ● Allow caching of flash contents (On) ● Allow instruction set simulation ● Verify memory mep | | | |
| Ready JLINK_GetHWStatus (Done) 0.033 sec. in 12 calls SEGGER J-Link V6.10a - Control panel Image: Control panel General Settings Breakpoints RTT Log file Image: CPU Regs Target Power Log file Image: CPU Regs Target Power Settings file Image: Cell Image: Cell Settings file Image: Cell Image: Cell Not specified Image: Cell Image: Cell | | | |

- Corist file -